


English Guide

Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

Front view

Speaker section

3D infrared transmitter

212

Stand


3D illumination

225


Timer program indicator

**78·124·127·
129·176**

Power indicator **37**

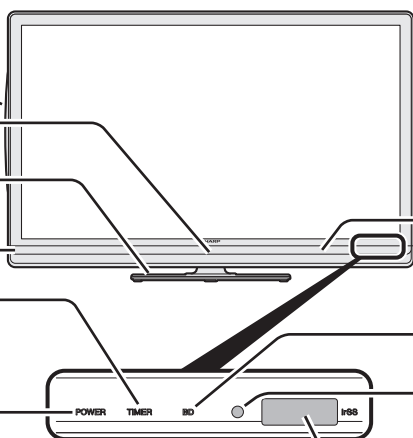

Speaker section

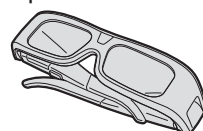

- Refer to pages **212~214** for 3D glasses.

Speaker section

BD indicator **38**

Ambient illumination sensor window **91**

Remote sensor window/
IrSS™ sensor window
263·297

- When using the remote control, point its head toward this window.

Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Control panel

Disc slot

Disc EJECT


Main power switch **37**

Home Menu **40**


Input / TV select (Enter) button **228**

Channel up (▲) /down (▼) buttons

Volume up (+) /down (-) buttons

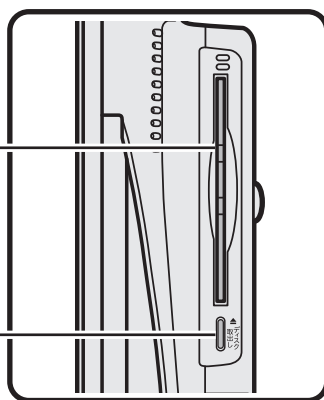


Right side view

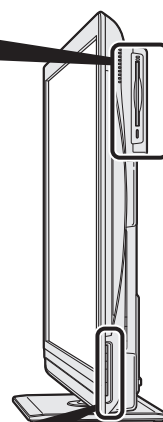

Back view

The illustrations below are those of LC-52LB3.
LC-46LB3 has the same layout of jacks and terminals as LC-52LB3.

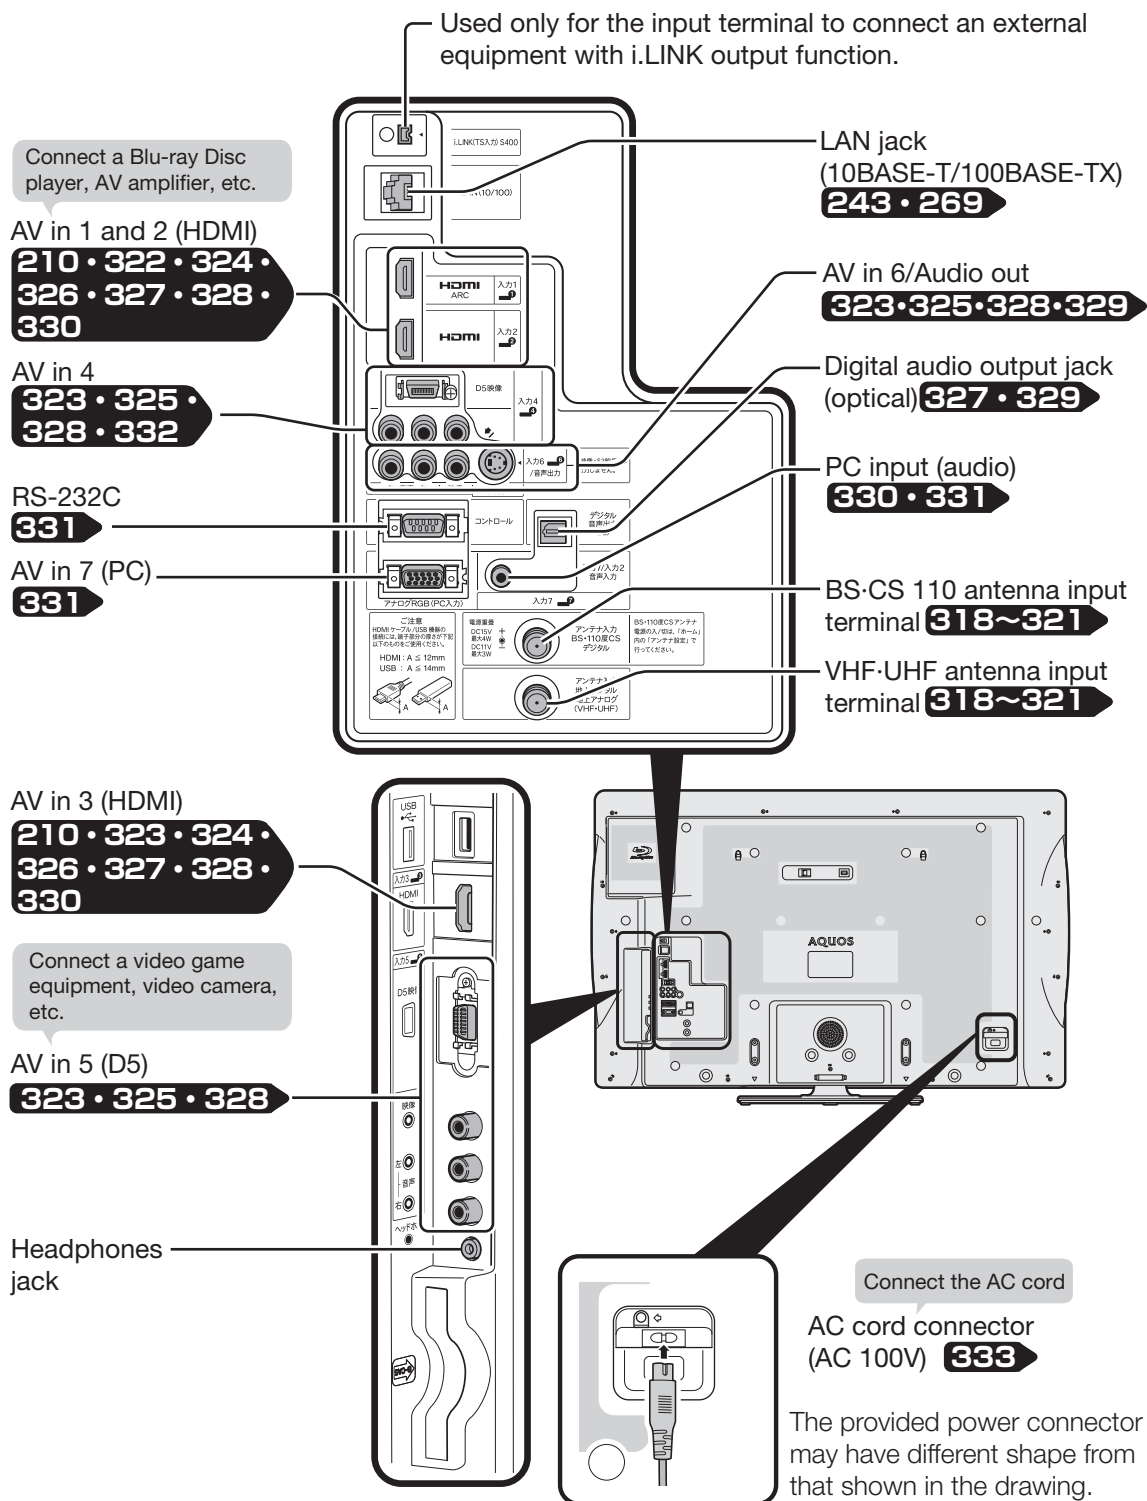

Remote Control Unit

Active/Standby 37

Press to engage the TV set in the active or standby mode.

Channel select 46 • 274

- Press to select a channel.
- Use to input a number for various settings.

List the programs recorded on BD 135

Display the Top Menu of the disc 139

Linked data broadcast 49 • 150 • 275

Mute 46

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (-) 46

Press to adjust the volume.

EPG 69 • 123 • 202

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

Finish

Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

3D brightness adjustment 224

Each time you press this button the brightness of 3D images is adjusted.

3D 217 ~ 220 • 222 • 226 • 227

Press to switch to 3D mode when the TV set receives a 3D signal.

Play back programs recorded on a disc 134

Fast forward, rewind, etc. during playback 146

See Page 46 for how to select a program.

Terrestrial Digital/BS/CS 46

Select the CS digital channel for the first time. 340

Display the Tool Menu 44

Input select 122 • 156 • 228

Channel up (^)/down (v) 46

Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Display the "Home" Menu 40 • 41

Press to start some useful operations of the TV.

Cursor (up, down, left, right) 40 • 41

Enter/Confirm 40 • 41

Return 40

Color 60 • 61

Use to operate EPGs, 3D mode and data program screens.

3D surround adjustment 224

Each time you press this button the surround effect of 3D mode is adjusted.

REC 119 ~ 122

REC STOP 119 ~ 122

Buttons under the cover

Hold the cover by the projections () and lift.

AV mode select 85

Audio select 69 • 70 • 150

Caption 70 • 151

CATV 48

Digital channel number input 48

Terrestrial analog 46

Recommended programs select 66 ~ 68

Press to select a program which the TV set recommends.

View status of the BD 116

Display the Pop-up Menu (BD) or Disc Menu (DVD) 139

Display 50 • 51

Press to display or turn off the channel call, etc.

Media select 46 • 49

Freeze 54

View the Internet or IPTV 259 • 274 • 278 • 282

Eject the disc 39

Familink 200 • 201 • 205 ~ 208


Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Display the Playback Menu 152 • 153

Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

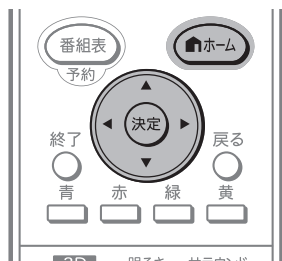


◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

 Press



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



2

Select with



Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



3


Select with



and press



Select “Language(言語)”.
「Language(言語)」を選ぶ

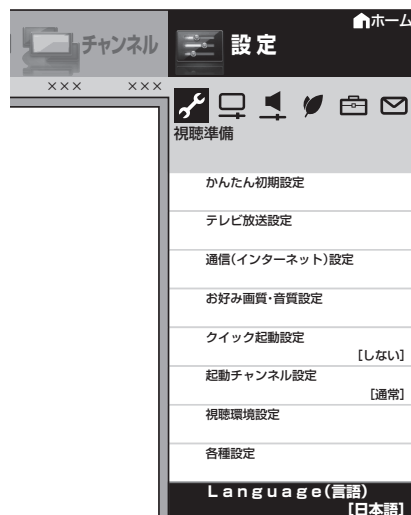

4

Select with



and press



Select “English”.
「English」を選ぶ

Enter.
決定する



5

Press



Finish this operation.
終了する

- The menu screen is now displayed in English.
- 画面表示が英語になります

はじめに
お読みください

テレビを見る／
便利な使いかた

録画・再生

ファミリーリンク

3D映像を見る

ビデオ・オーディオ・
パソコンをつなぐ

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や索弓)

English
Guide